
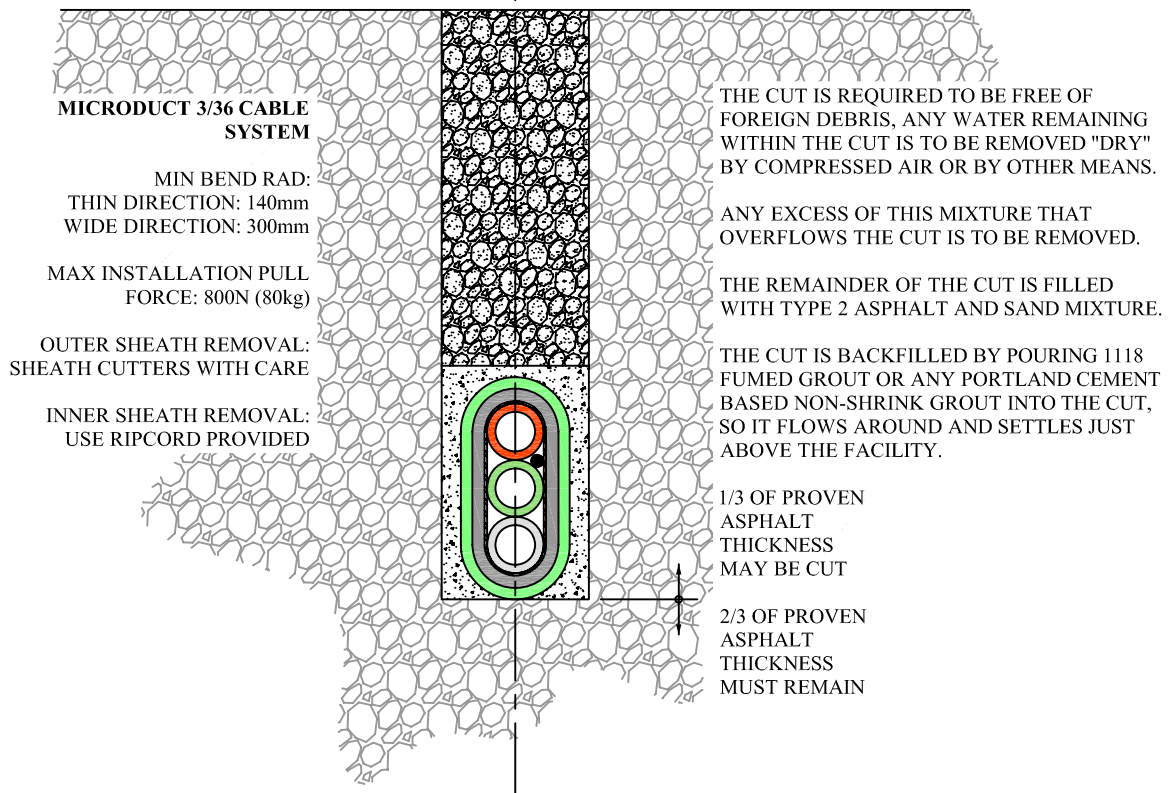


FOLLOW EXPANSION JOINT, COLD JOINT, PANEL JOINT, OR GUTTER EDGE WHEREVER POSSIBLE. CONSULT WITH MUNICIPAL OR ROW AUTHORITY PRIOR TO BEGINNING WORK. COMPLY WITH LOCAL REGULATIONS REGARDING SAW CUT RESTORATION FOR THIS TYPE OF SURFACE COVER.

IF THE THICKNESS OF PAVEMENT DOES NOT ALLOW FOR AT LEAST 20mm OF COVER, ANOTHER RUNNING LINE WILL HAVE TO BE DETERMINED.

IF THE THICKNESS OF PAVEMENT DOES NOT ALLOW FOR AT LEAST 50mm OF COVER, THERE IS A SUBSEQUENT DANGER THAT THE UTILITY WILL BE AFFECTED BY PAVEMENT RESURFACING.

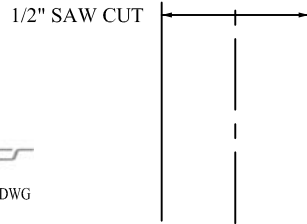

**SAWCUT DETAIL - ASPHALT SURFACE**

PROFILE VIEW - SCALE: N.T.S. - UPDATED 20070828

**DISCLAIMER**

THE LOCATIONS OF UTILITIES OR STRUCTURES SHOWN ON THIS DRAWING ARE APPROXIMATE ONLY. AXISS TECHNOLOGIES, LLC & BSE HEREBY DISCLAIMS ANY RESPONSIBILITY TO THIRD PARTIES FOR THE ACCURACY OF THIS INFORMATION. PERSONS PERFORMING SURFACE INLAY WORK MUST CONTACT THE APPROPRIATE CALL-BEFORE-YOU-DIG SYSTEM TO ASCERTAIN THE LOCATION OF UNDERGROUND UTILITIES PRIOR TO PERFORMING ANY EXCAVATION, DRILLING, OR SAWCUTTING